



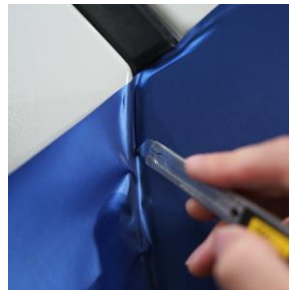

Banner Base Application:

1. Clean the windshield free of any dust.
2. Mark the center of the windshield using a tape.
3. Test fit the banner over the windshield to determine the desired banner height. In this case, we decided to align the two edges slightly over the top corners of the windshield.
4. Locate the top center of the banner, indicated by a triangle outout.
5. Remove the backing paper, and align the center of the banner with the triangle outout of the banner, make sure the side is aligned to your desired height.
6. Adjust and realign the banner location if needed.
7. Use a squeegee to apply the banner to the windshield and remove any air bubbles. The wrap material has air-release channels to ease the process. **Some wrap material may be prone to scratches, take extra care when applying.**
8. Carefully cut off the excess material using a blade/exacto knife. **NOTE: leave ¼" to ½" material around the windshield.** We will use this portion to wrap around the edge of the windshield.
9. Remove the extra material.
10. Tuck the wrap material around the windshield with a squeegee.

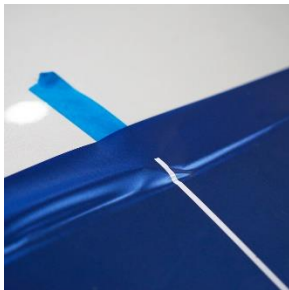

Evasive Sticker Application:

NOTE: For outlined version repeat the process twice, outline layer first, then Evasive logo on top.

1. With backing paper attached, align the Evasive sticker with the center of the windshield, secure with tapes on the top edge.
2. Remove the backing paper from the Evasive sticker and gently lay the sticker on the banner with a squeegee.
3. Slowly peel off the transfer paper on top.

Remark: "Flat" banner is designed to counter the effect of arching, it appears curved when not installed. Vice Versa, "Universal Curved" appears flat when not installed. Apply with confidence.