



Eventuri – HKS BOV Adapter Install

Honda Civic Type R 2017+

Parts List:


- 1x Silicone Elbow Hose
- 1x 6mm Spacer
- 1x 25mm M6 Bolt
- 1x Bracket

Install Procedures:

1. Follow HKS SSQV IV install instructions up until step 5.
2. The HKS parts in the photo below will not be used.



3. Install the factory bracket on the SSQV pipe using the factory bolt.

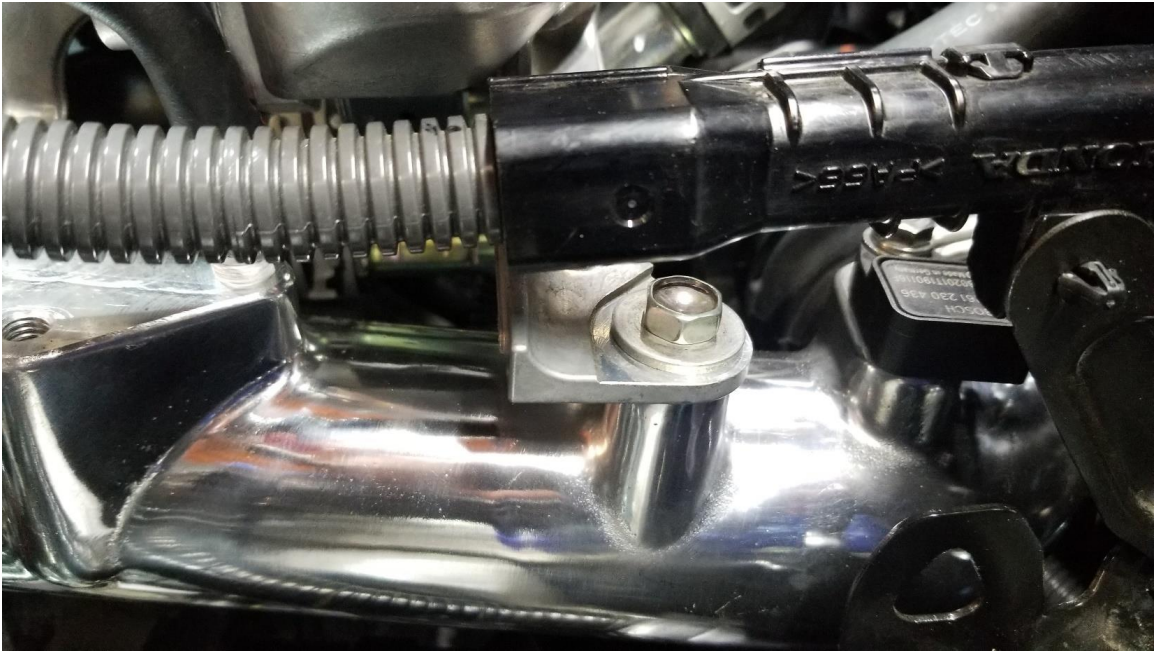


4. Arrange the supplied EVS parts as shown below.




Thank you for your order!
Tag us on Instagram!
@EVSTuning | #evstuning

5. Remove the M6 bolt holding the heater hose bracket. Install the EVS Tuning adapter assembly over the heater tube bracket.

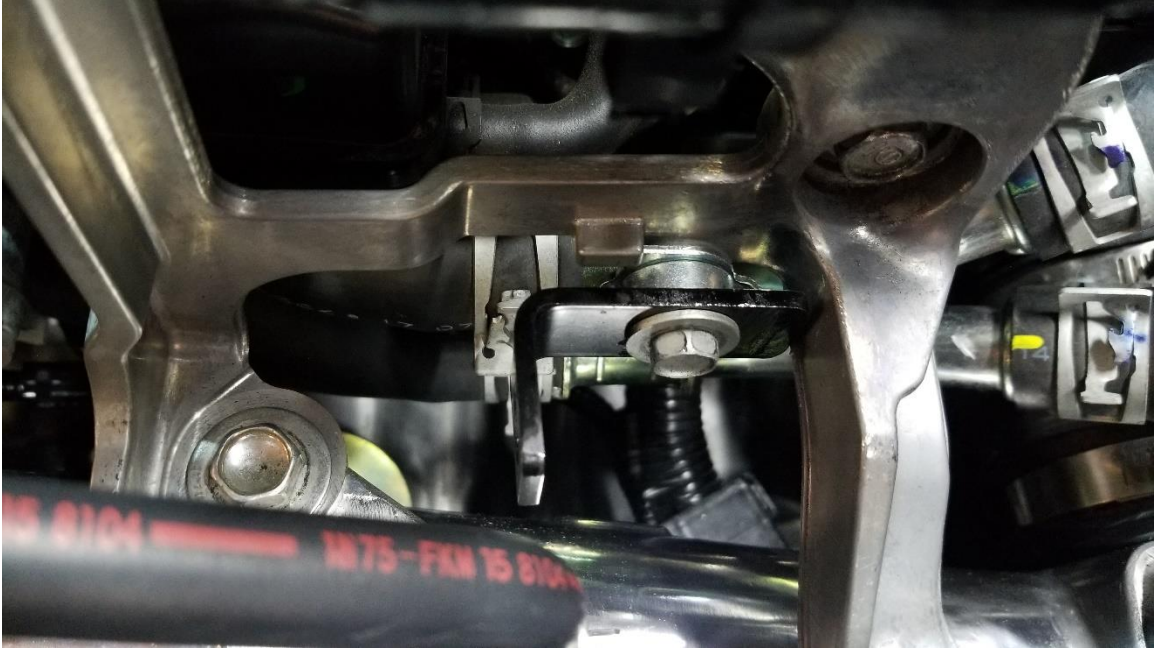

6. Install SSQV Assy using HKS Bolt M8-15, spring washer and flat washer as in the photo below.

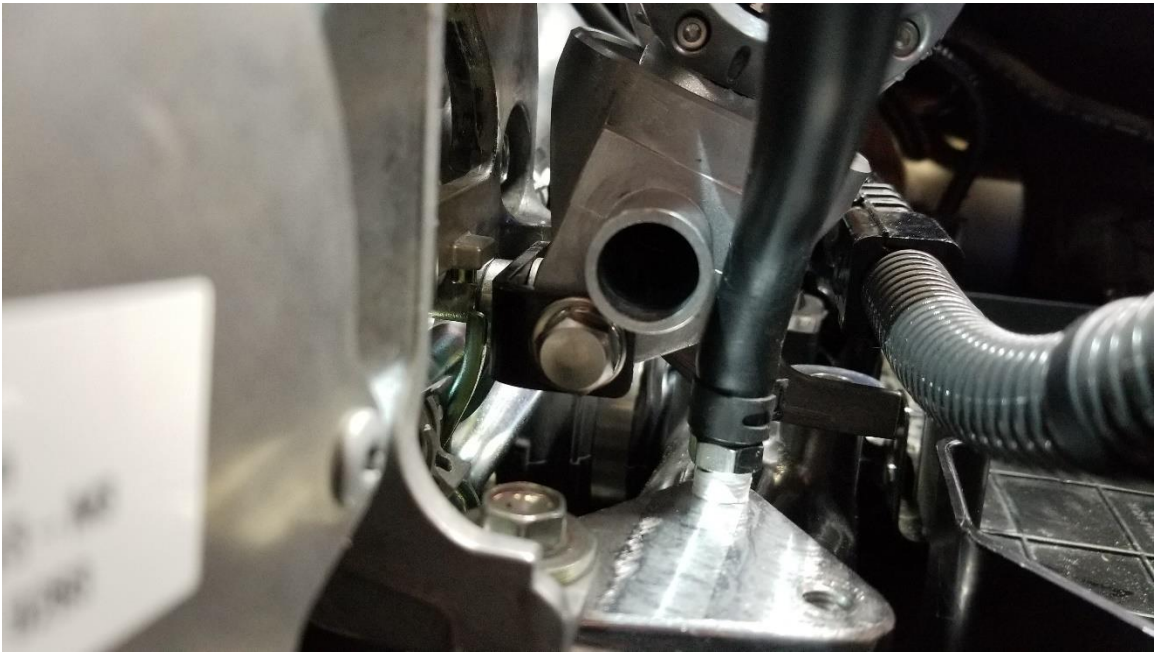

Thank you for your order!
Tag us on Instagram!
@EVSTuning | #evstuning

7. Install the EVS Tuning supplied hose with hose clamp #20. Tighten all hose clamps and bolts.



8. Install the remainder of the kit as described in HKS instructions from step 10 and on.

Thank you for your order!
Tag us on Instagram!
@EVSTuning | #evstuning